

## Initial Setup

### Unpacking the machine



1. Open box and lift out machine
2. Carefully remove contents

Please keep packaging in case the machine needs to be returned at any point.

### Contents

The contents of the box is listed on the back of this sheet. Please check to make sure that the contents are complete. If you have any queries with the content please contact Technical Support, Monday to Friday, 9am to 5pm on:

**0800 412 5424**

### Setting up your machine

Your Eco Pro is designed so that you can set it up quickly and start using it right away. Here are the key tasks to complete before you turn on your machine:

### Locating the machine

Place the machine on a sturdy, flat surface near a power socket.



### Attaching the bottle holder

Start by removing the thumbscrew on the back of the machine. Locate the two hooks on the bottle holder into the slots on the back of the machine, slide the bottle holder to the left and then use the thumbscrew to secure the bottle holder in place.




### Installing the polish and water

1. Remove the caps from the two bottles and store.
2. Hang the polish bottle on to the left slot on the bottle holder (looking at it from the back).
3. Hang the water solution bottle on to the right slot on the bottle holder.
4. The cap with the green text attaches to the polish bottle, but you must remove the small black rubber cap from the pipe first.
5. The cap with the blue text attaches to the water solution bottle.
5. Ensure that the tubes reach the bottom of both bottles.



### Removing the polish nozzle caps

There are two more black rubber caps on the polish nozzles, inside the machine, that must be removed before using the machine. It is not necessary to keep these as they are only designed to prevent the polish from drying out in storage

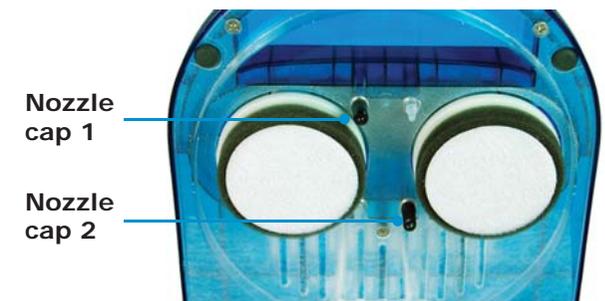

### Installing the chip

Locate the chip card and install as shown here



### Powering up the machine

Once you have set up your machine you are ready to repair your first disc. Plug the machine into a grounded power outlet and switch on the mains socket switch. Then switch the machine on using the red power switch on the front of the machine.

The machine will bleep and the lid will open automatically.

Now refer to the user guide in the information pack for instructions on repairing your first disc.

## Initial Setup

### Machine box contents



**Machine**



**Bottle of polish compound  
(100ml)**



**Bottle holder**



**Power lead**



**User guide**



**2 x Polishing pads  
(Installed in the machine)**



**Bottle of water solution  
(100ml)**



**Cleaning cloth**



**Key card  
(300 mins)**